

HYDROCAT-180™

AutoNav

Up: Manual Mode
Down: Auto Mode

AutoNav

Up: Arm
Down: Disarm

Power: ON/OFF

Winch Control Knob

Arming Safety Switch

Pole Actuator

Up: Recover
Down: Deploy



Forward
Left ↔ Right
Reverse

Start Up

- ① Center all switches and joysticks.
- ② Hold Power button until all four loading process dots appear on the screen.
- ③ If Switch Warning appears, make sure all switches are turned off or centered (Winch Knob center), auto switch is set to Manual and arming is set to Disarm.

Arm HydroCat-180

- ① To arm the HydroCat's AutoNav move arming switch to arming position then hold arming toggle switch up for 3 seconds. You will hear the HydroCat AutoNav chime when arming is complete.
- ② To Disarm, switch the Arm switch to Disarm and hold arming safety switch for 3 seconds. The AutoNav will chime when disarmed.

Optional Long Range Module

- ① Install R9M with antenna on the back side of the remote.
- ② Plug in external 2s battery to the R9M.

Rev 10/16/2020